

DCSAP connections

LBW-420-1 to Digital Central Supervisory Control Panel (DCSAP)

Pre-Alarm Relay NC Connect to DCSAP Channel Connector *Wnc*

Sensor 4-20Ma - Connect to DCSAP Channel Connector *il*

Alarm Relay NO Connect to DCSAP Channel Connector *Anc*

**Relay Common, DCSAP Channel Connector *Com*
Alarm Relay Common**

Pre-Alarm Relay Common

From DCSAP GND

From DCSAP *Vo*

Note: The auxiliary relay can operate at the same time as the alarm or pre-alarm relay.

LBW-420-1 Relay connections

Connect shield drain wire at DCSAP end only. DO NOT connect at the LBW-420-1 end.

